

SPYPOINT

FORCE-20 & COMPARABLES*



QUICK START GUIDE

IN THE BOX

- 1x Camera
- 1x Strap
- 1x SD card 16Gb
- 1x SD card reader
- 1x Quick Start Guide

Note: Batteries sold separately.

User manuals, software updates & FAQs available at:
support.spypoint.com

COMPONENTS

- 1 LED
- 2 Pilot Light
- 3 Photo Lens
- 4 Detection Lens
- 5 Opening for Lock Cable
- 6 Slot for Strap
- 7 Plug 12V
- 8 Tripod Bracket
- 9 Screen LCD
- 10 OK Button
- 11 Navigation Buttons
- 12 ON/OFF/SETUP Button
- 13 Card Slot SD
- 14 Battery Compartment


*The specifications and characteristics of similar models may vary. Refer to the website or packaging for details.




PREPARATION

SELECT A POWER SOURCE

ENGLISH

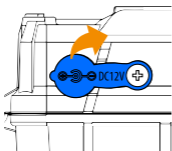

12V
Power Source

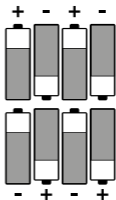

8 AA alkaline or lithium
batteries



Be sure to insert AA batteries in keeping with the (+) and (-) signs.

To ensure that the device operates at maximum performance and to avoid battery leakage, we recommend using new batteries. Use **ONLY** lithium or alkaline batteries, **NOT** a combination of the two. Rechargeable AA batteries are not recommended because they produce lower voltage and may function poorly as a result.

INSERT A MEMORY CARD

Insert a SD/SDHC memory card (up to 32 GB capacity) into the SD card slot with the label side up. If the card is correctly inserted, you will hear a click. Always ensure that the camera is turned off before inserting a memory card.



We recommend reformatting your SD card if it was previously used in another electronic device.

Use the ▲ ▼ ◀ ▶ buttons to switch to the LCD display or to change options and press OK to select. Several setup pages will be displayed.

GENERAL SETTINGS SETUP

- A. To turn the camera on or off, use the ON/OFF/SETUP button;
- B. The button must be on SETUP to make your initial changes;



- C. When the button is on SETUP, press OK to open the MENU;
 1. Set the **Language** (French, English, German)
 2. Set the **date** (MM/DD/YY or DD/MM/YY)
 3. Set the **time** (12-hour or 24-hour clock)
 4. Set the **temperature** (°F or °C)

ADJUST THE SETTINGS FOR THE 3 MODES OF OPERATION

Picture Mode

DELAY

Allows you to select the time elapsed before the camera can detect again and take the next picture.

If you want to capture multiple images, use a shorter delay.

Once you have selected the delay, press OK.

QUALITY

Allows you to select a resolution of 20 MP or 3 MP. Once you have made your selection, press OK.

MULTI

Allows you to select the number of photos to be taken per shot (from 1 to 5 photos). Once you have made your selection, press OK.

DETECT

Allows you to set motion-detector sensitivity (LOW, NORMAL, HIGH, AUTO). Once you have made your selection, press OK.

Video Mode

DELAY

Allows you to select the time elapsed before the camera can detect again and take the next video.

QUALITY

Allows you to choose between HD and VGA. Once you have made your selection, press OK.

LENGTH

Allows the user to choose the video length (10 to 60 secs). Once you have made your selection, press OK.

DETECTION

Allows you to set motion-detector sensitivity (LOW, NORMAL, HIGH, AUTO). Once you have made your selection, press OK.

Mode Time lapse

TIME LAPSE : Allows you to take pictures at regular predefined intervals without necessarily detecting a movement.

NIGHT

Choose the BOOST option for maximum brightness for night vision. Select OPTIMAL to reduce fuzziness at night. Once you have made your selection, press OK.

	OPTIMAL MODE	IR-BOOST MODE
Invisibility of the LEDs	★★★★★	★★★★★
Battery life	★★★★★	★★★★★
Flash range	★★★★★	★★★★★
Blur reduction	★★★★★	★★★★★

Other Options

Name: Allows to give a name to your camera.

About: Indicates software version.

Default: Resets all default settings.

Format: Allows the camera to format the SD card the next time it is used. (Reformatting the SD card will delete all the images and videos on the card. **Only** format the card if you are sure you want to delete everything on it. Transfer all data to your computer beforehand).

Once the setup is complete, turn the button from SETUP to ON. You may also switch from SETUP to OFF and turn the camera to ON later.

RED LIGHT ON THE FRONT OF THE CAMERA

When the button is in the SETUP position the red light will flash to confirm a motion detection once you have adjusted your settings.

When you move to the ON position, the red light at the front of the camera will flash for 30 seconds to allow you to move out of the camera field of view.

When the light turns off, the camera is ready for use.

Recommended height of installation:

The camera must be installed at the height of the centre line of the animal's body.

Ideal setup for high-quality images and videos:

The target animal should be 7.5 m from the camera to get a better line of sight.

To produce brighter pictures at night, there should be items in the background to reflect the camera's flash.

Please note that the camera should never be directly pointed at the sun to avoid back lighting and faulty detection.

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions: (1) this device may not cause harmful interference, (2) this device must accept any interference received, including interference that may cause undesired operation.

THANK YOU

for choosing



Sit back & relax as this camera is covered by the "Know you're covered" 2-year warranty.

We strive to provide our customers with a positive experience and an outstanding service.

User manual, latest firmware & FAQ available at
support.spypoint.com

Online support at SPYPOINT.COM
service@spypoint.com

Join the community

Facebook: www.facebook.com/spypoint/

Youtube: www.youtube.com/user/SpypointTrailCam

Instagram: [@spypointcamera](https://www.instagram.com/spypointcamera)

Flickr: www.flickr.com/photos/spypoint/