

# FLEX SERIES

## Quick Start Guide



FLEX-M

FLEX Q-36

FLEX-PLUS

FLEX-S

FLEX-DARK

FLEX-S-DARK



v1.2

## IN THE BOX

FLEX SERIES

Camera

ANTENNA &  
GASKET

CHARGING CABLE

**FLEX-S & FLEX-S-DARK only**

2 SIM CARDS

**Preactivated and inserted**  
(do not remove)

INSTALLATION  
STRAP

**REQUIRED** (sold separately)

## MEMORY CARD

2 to 512 GB class 10  
ultra-high speed  
new microSD card

---

8 AA

**Lithium non-rechargeable  
recommended**  
(Optional for  
FLEX-S & FLEX-S-DARK)

-  
FLEX-PLUS 8 or 16 AA

or

LIT-22

**Rechargeable lithium  
battery pack**  
(Optional for  
FLEX-S & FLEX-S-DARK)

-  
FLEX-PLUS 1x or 2x LIT-22

## BEFORE YOU GO TO THE FIELD — Getting ready, first time use

**FLEX-S & FLEX-S-DARK ONLY**

**#1**

### **Charge the internal battery.**

While the camera is off, plug the charging cable into the camera DC port. The status light will illuminate red while charging and turn off when fully charged. It is recommended to charge the battery fully (approximately 12 hours).

**#2**

**Create an account on  
[spypoint.com/activate](https://spypoint.com/activate).**



# #3

Download the SPYPOINT app and sign in.



# #4


In the Cameras tab,  
press the  button.



Follow the instructions on the screen to add your camera.



# #5

**Screw in antenna  
& insert memory  
card, batteries.**


 Insert the tray(s)  
following the arrow  
orientation.

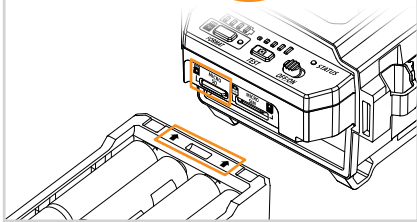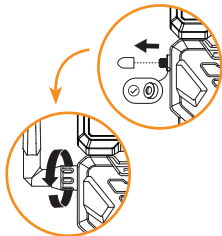

## #6

### Turn your camera ON.


All LEDs will begin to blink.

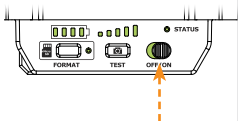

## #7


### Format your memory card.

Immediately hold down the FORMAT button until the LED blinks green. Format is complete when LED stops blinking.

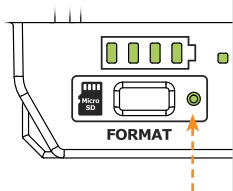


**#8**

Press the **TEST** button to receive a photo.

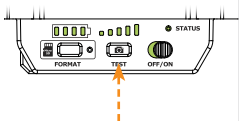

**#9**

Turn your camera **OFF** until you're ready to install it in field.

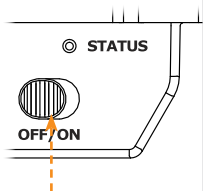



## IN THE FIELD

#10

**FLEX-S &  
FLEX-S-DARK ONLY**

Install your camera in a location where the solar panel will receive at least 4 hours of direct sunlight.


### Tips

**Use:** Installation strap

**Orientation:** North or South

**Height:** Subject's mid-body

**Lens sight:** No leaves, branches or tall grass in front

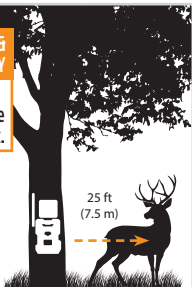

#11


Turn your camera  
ON & test it.


(Steps 6 & 8)





# COMPONENTS

- |                  |  |
|------------------|--|
| 1 Microphone     | 14 Antenna gasket                                    |
| 2 IR LED         | 15 Antenna O-Ring                                    |
| 3 Light sensor   | 16 DC jack   |
| 4 Delay light    | 17 Cable lock hole                                   |
| 5 Photo lens     | 18 Locking latch                                     |
| 6 Detection lens | 19 Slots for installation strap                      |
| 7 Battery level  | 20 Screw-thread for standard<br>1/4"-20 tripod mount |
| 8 Signal level   | 21 Battery door                                      |
| 9 STATUS light   | 22 microSD card slot                                 |
| 10 FORMAT button | 23 Micro SIM card slots                              |
| 11 TEST button   | 24 Battery tray                                      |
| 12 OFF/ON switch | 25 Solar panel                                       |
| 13 Antenna       |  |

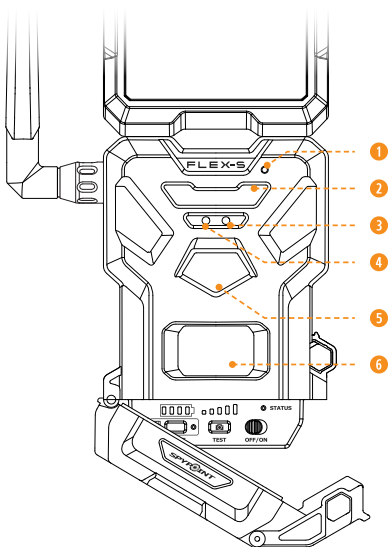


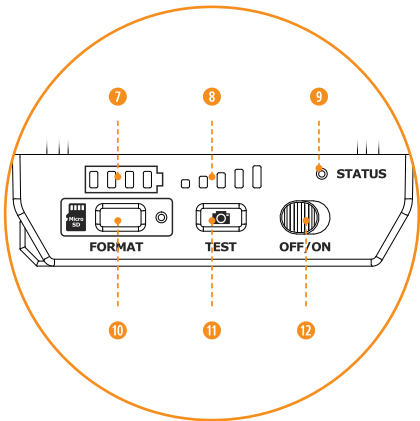


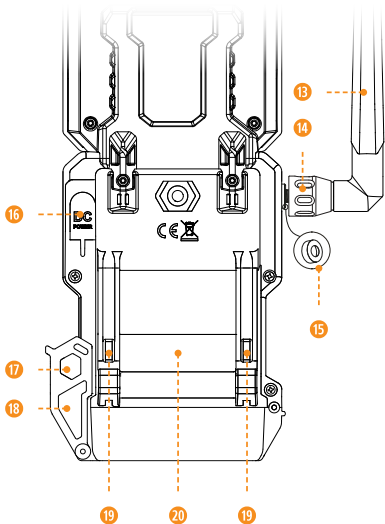

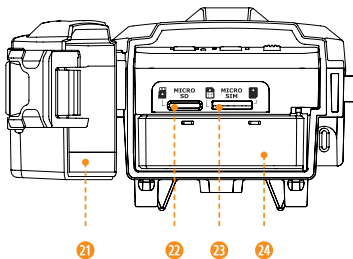

## FLEX-PLUS ONLY

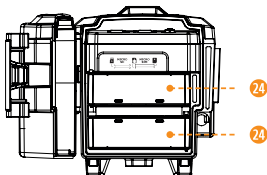

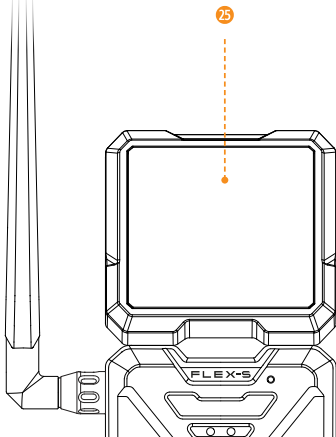

# FLEX SERIES

More information available in  
the certification guide.



**SPYPOINT**